


Part # BAK-1220-300



101 Airpark Rd.
Ph. 928.649.3201 Cottonwood, AZ 86326 Fax 928.649.3970
www.LaserLyte.com

12 to 20 GAUGE SHOTGUN BORE ADAPTER INSTRUCTIONS

Works with any of LaserLyte's .22 to .50 Cal. Laser Bore Tools

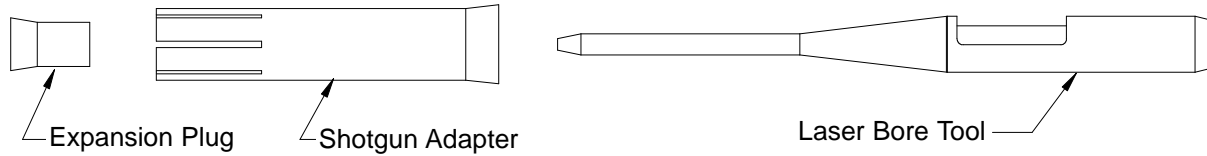

MAKE SURE YOUR SHOTGUN IS UNLOADED BEFORE PROCEEDING!

1. Insert the Laser Bore Tool into the tapered end of the Adapter.
2. Insert the Expansion Plug into the slotted end of the Adapter. Thread the Laser Bore Tool into the Expansion Plug until the tapered portion of the Plug is even with the end of the Adapter.
3. Place the Adapter/Laser Bore Tool into the shotgun barrel. Turn the end of the Laser Bore Tool clockwise until the end of the Adapter has spread open for a snug fit.
4. Turn on the Laser Bore Tool and follow the instructions supplied with the Laser Bore Tool for aligning your scope or sights of your shotgun.
5. To remove, turn Laser Bore Tool counterclockwise until Adapter is loose in bore then pull out.


Part # BAK-1220-300



101 Airpark Rd.
Ph. 928.649.3201 Cottonwood, AZ 86326 Fax 928.649.3970
www.LaserLyte.com

12 to 20 GAUGE SHOTGUN BORE ADAPTERS INSTRUCTIONS

Works with any of LaserLyte's .22 to .50 Cal. Laser Bore Tools

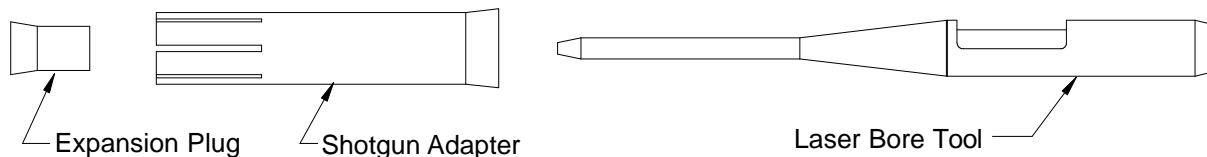

MAKE SURE YOUR SHOTGUN IS UNLOADED BEFORE PROCEEDING!

1. Insert the Laser Bore Tool into the tapered end of the Adapter.
2. Insert the Expansion Plug into the slotted end of the Adapter. Thread the Laser Bore Tool into the Expansion Plug until the tapered portion of the Plug is even with the end of the Adapter.
3. Place the Adapter/Laser Bore Tool into the shotgun barrel. Turn the end of the Laser Bore Tool clockwise until the end of the Adapter has spread open for a snug fit.
4. Turn on the Laser Bore Tool and follow the instructions supplied with the Laser Bore Tool for aligning your scope or sights of your shotgun.
5. To remove, turn Laser Bore Tool counterclockwise until Adapter is loose in bore then pull out.