

Universal Laser Trainer

LT-1

TRAINING MODE


Battery Replacement:

(3) 399 or SR927W Batteries

**Remove plastic insulator from batteries in brass tube before use.*

- 1 Turn the laser to the on position.
- 2 Lift up on the plastic battery cup.
- 3 Pull out brass tube and unscrew back cap.
- 4 Insert Batteries with positive (+) going into brass tube and replace back cap
- 5 Reinstall plastic battery cup into laser trainer.

**When your Universal Laser Trainer is not in use remove the batteries and store in a safe place.*




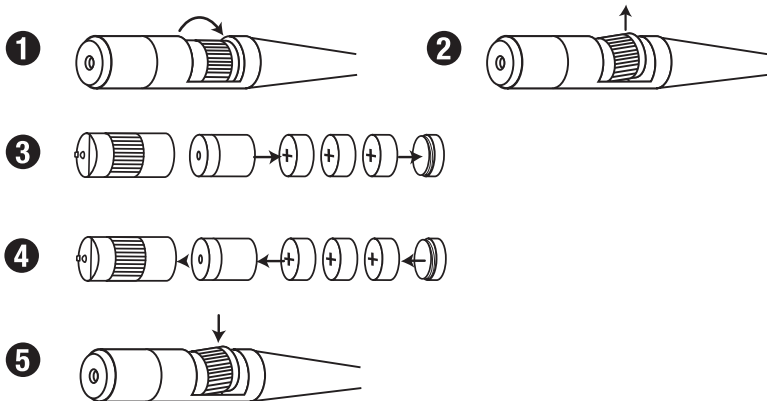


LASER PULSE USE

- 1 UNLOAD YOUR FIREARM!
- 2 Find adapter to fit your barrel, thread proper screw into adapter.
- 3 Adjust adapter to fit snug inside of barrel.
- 4 Roll the switch until it comes on.
- 5 Make your firearm ready and then pull the trigger. Every time the firing pin drops the laser light will pulse for approximately 100 milliseconds. This shows where impact would have been if one was shooting real ammunition.

** LaserLyte strongly recommends the use of snap caps when dry firing your weapon.*

1 UNLOAD YOUR FIREARM!

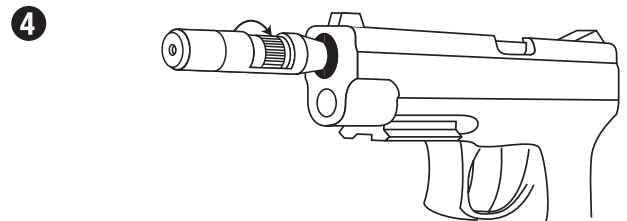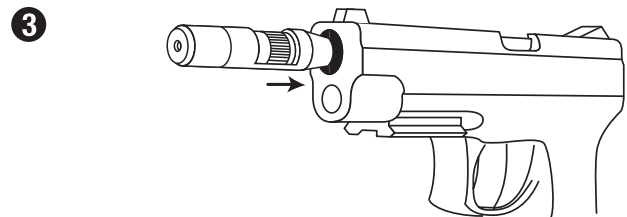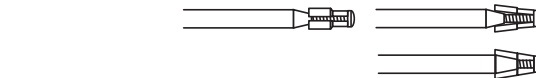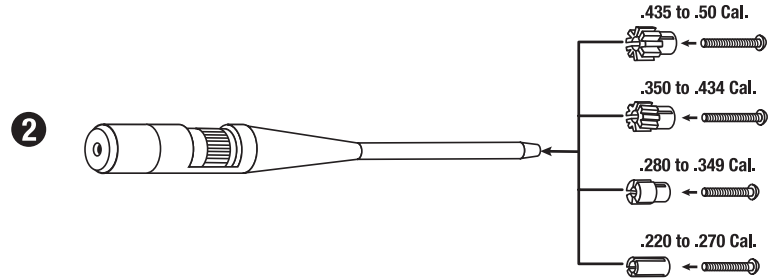

Pull the trigger -
the laser will activate
indicating impact

CONSTANT ON MODE

Battery Replacement: (3) A76 or G13 Batteries

- 1 Turn the laser to the on position.
- 2 Lift up on the plastic battery cup.
- 3 Pull out brass tube and replace with batteries.
Insert Batteries with positive (+) going into cup.
- 4 Put plastic battery cup back into bore tool.



WARRANTY:
The Universal Laser
Bore Sighter is warranted
for one year from any
manufacturers defects
from date of purchase.



LASERLYTE
A Division of P&L Industries
101 Airpark Road - Cottonwood, AZ 86326
Phone 928-649-3201 - Fax 928-649-3970
www.LaserLyte.com